


Smart Translation Machine




User Manual

Product:

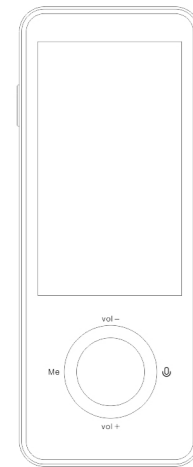

main engine*1

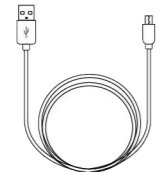

USB cable*1



specification*1




Certificate of approval*1



warranty card*1

(Note: please check whether the above accessories are complete after unpacking. If not, please contact the dealer)

Key specification:

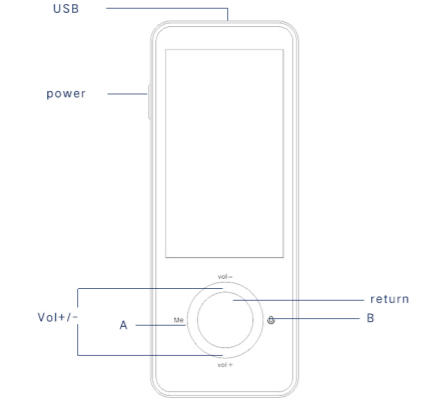

Double click any key to swipe the screen to unlock

A/B: Corresponding to the left & right translation language of the display interface

return: Only one level up operation can return

Vol+/-: Adjust volume

power: Short press lock screen / wake up screen, long press shutdown / power on

USB: Connect USB cable or charge or connect headset

Quick Start Guide:

First of all, thank you very much for using our products!

Preparation

Please check if the accessories in the package are well provided before using this device: Smart Translation Machine*1, Data Cable*1, User Manual *1, Certificate*1, Warranty Card*1, SIM eject tool*1. This device supports both mobile networks(requires SIM card inserted) and wireless. Please select the proper networking mode according to the actual use. If both of them exist at the same time, the wireless network is preferred.

Wireless network

After the boot up of the device, the wireless network can be configured through the following steps:
Launch "settings" and enter "WIFI" submenu.
Toggle on the switch.
Select the desirable wireless name (SSID) and input the correct password if there is.
Click "Confirm" to connect.

Charging

When the device is in low-power state, the battery icon on the Status Bar will turn into an obvious low-power state as well. During the low-power state, some functions of the device may not work properly. When the battery state is below the 3.4V, the device will automatically shut down to protect the data. To boot up require sufficient charging.

Power On / Off

Power On:
Long press the Power Button till the screen is on. The initialization of the device may spend some time, please wait a while.
Power off:
Long press the Power Button till a dialog prompted, select "Power Off" to turn off the device.

Wake up /

Manually:
• Sleep the device by short pressing on the Power Button.
• Wake up the device by short pressing on the Power Button.

Automatically:
• The device will go into sleep mode automatically when there were no operations for a period of time.(Settings>Display, in this menu, you can change the time it takes you device to go to sleep)
• Wake up the device by short pressing on the Power Button.

Home screen

Home screen of the device is the entrance to 6 core functions:Translate, Recording, Conversation, Instant camera translation , MIFI, Settings. Perform click on these icons will lead to the corresponding function page.

Status bar

The status bar at the top of the device screen primarily display information about the current state of the device. Such as WIFI network state ,battery state, mobile network state and the information of SIM card...

Introduction of Core Functions: Translation:

Language selection
There are two kind of translation mode: online translation and offline translation, the device can change translation mode automatically.
Online translation supports for 45 different languages real time inter-translate.
Offline translation currently only supports for Chinese and English(the coverage scope may change after the software update.) When the device is offline, it will automatically change to offline translation mode.

Recording recognition:
• In the Recording Page, to start recording, click the 'microphone' icon at the bottom right.
• Automatically identify the source language in the process of recording and display it on the page.
• Click the 'Language Switch' icon at the bottom left to view the original / translated text.
• The recording function supports maximum of 1-hour recording.

Voice recognition:

• TLong press the A/B Button on the device to trigger the Speech-Recognition mode.(A Button for the language on the left side, B Button for the language on the right side)
• TAfter releasing the A/B Button, the speech will be automatically recognized and translated to the specified target language. The pronunciation starts automatically if voice broadcast is enabled in the application settings.
• TThe list presents previous voice translation results. Swipe up and down to review when the records are too many.

Favorites:

• Long press on the specific item in the list of translated result will prompt with a dialog.
• Tap the "Favorites" option, with a notice, the specified translation result is marked as favorites.
• Swipe to the right will enter the Favorites page, in which you can review all the favorites.
• Short click on any record, the pronunciation starts automatically. To clear the record, tap and hold it.

Recording:

Choosing the source and target languages :
• Click the three-dot icon at the top right of the recording page to see the list of available languages.
• Swipe up and down to find the language you need . Tap the name of the language to activate it.

Recording recognition:
• In the Recording Page, to start recording, click the 'microphone' icon at the bottom right.
• Automatically identify the source language in the process of recording and display it on the page.
• Click the 'Language Switch' icon at the bottom left to view the original / translated text.
• The recording function supports maximum of 1-hour recording.

Saving the recording results:

• Click the red 'stop' icon at the bottom right to prompt the confirmation.
• Tap "OK" to stop and automatically save the recording file.
• Click the three-dot icon at the top right to view the list
• Recording text saving location: plug in the computer - click the recording translation folder

Conversation:

Brief introduction:
The conversation function supports the recognition and broadcasting of languages over 45 countries(regions) (the coverage scope may change after the software update), reducing the language barriers, facilitate the inter-person communication.

Hold a multi-person conversation:

◆Create a multi-person conversation(Applicable only if the device did not join any existing one yet)
•Click the "Create" icon on the conversation page
•Input the ID of the target device that you need to invite, then click "Confirm".
•Click the "Done" button to complete the creation.

Invite to join multi-persion conversation
•In the Multi-person conversation page, click the button at top right and select "Add member" options.
•Input the ID of the target device that need to join, then click "Confirm".
•Click "OK" to complete the invitation.

Voice recognition:

• Long press on the A/B Buttons in the conversation page to enter voice recognition mode
• Speak in the language that you have set in the system as spoken input.
• When you finish, then release the A/B Buttons, the translation is done automatically.

Add a member:
• In the Multi-person conversation page, click the button at top right and select "Add member" options.
• Input the Chat ID of the target device that need to invite, then click "Confirm".
• Click "OK" to complete the invitation.

Member management:
• In the Multi-person conversation page, click the button at top right and select "Member management" options.
• Click "Leave conference" to quit the conversation.
• Click the "X" button next to each member to exclude the specific member.

Language selection:
• Click the button at top right of the Multi-person conversation page and select "Select language" options.
• Set the language according to the actual needs.

Advanced Settings:
• Click the button at top right of the Multi-person conversation page and select "Settings" options.
• Switch on / off "Automatic broadcast" will enable / disable automatic message broadcast
• Switch on / off "Block information" will enable / disable message blocking function

Instant camera translation

Language selection:
• Click the button at top of the instant camera translation page and select "Select language" options.
• Click to choose the source language / target language as needed.

Instant camera translation
• Click the button at top of the instant camera translation page and select "Select language" options.
• Turn camera flash on or off as you need.
• Tap Take photo.
• At the bottom ,tap the button.
• The text on your screen is translated.

Offline translation:
Language selection:
• Tap the language button at the top of the Translate page to see the list of available languages.
• Swipe up and down to find the language you need . Tap the name of the language to activate it.

Voice recognition:
• Long press the A/B Button on the device to trigger the Speech-Recognition mode.(A Button for the language on the left side, B Button for the language on the right side)
• After releasing the A/B Button, the speech will be automatically recognized and translated to the specified target language. The pronunciation starts automatically if voice broadcast is enabled in the application settings.
• The list presents previous voice translation result. Swipe up and down to review when the records are too many.

Favorites:
• Long press on the specific item in the list of translated result will prompt with a dialog.
• Tap the "Favorites" option, with a notice, the specified translation result is marked as favorites.
• Short click on any record, the pronunciation starts automatically. To clear the record, tap and hold it.

Settings:

• **WiFi:** Configure WIFI network for the devices.
• **MIFI:** when you insert a valid SIM card, you can open the Shared hotspot as mobile WIFI.
• **Mode:** you can choose either automatic broadcast or manual broadcast mode. When you choose the manual mode, the translation results will need to be manually clicked to broadcast.
• **Bluetooth:** you can connect you device with a compatible Bluetooth enabled device.
• **Display:** In this menu, you can change the time it takes your device to go to sleep. The time limit you can choose: 30 seconds, 1 minute, 3minutes, Never turn off.
• **Date & Time:** automatic mode and manual mode are available to choose.
• **Reset:** reset the device to its factory state (delete all user data on the device, and this cannot be undone)
• **Firmware upgrade:** check information of the existing version and new version.
• **About us:** check the model name, version number, patent information of the device.

Online Update:

When there is a new version upgradable, the device will check for it when user switched language, reboot the device, or 24 hours after the previous check. Both WIFI and mobile network are applicable for the update.